


INSTRUCTIONS FOR ASSEMBLY AND DISASSEMBLY OF FIXED PRESSURE TENT


MONTAŻ

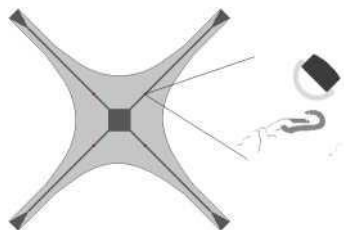


Lay out flat and fasten the lashing lines to the eyelets with snap hooks.




Prepare inlet valves for pumping. Valves are located at the bottom of the leg of the tent. Unscrew the first pin.

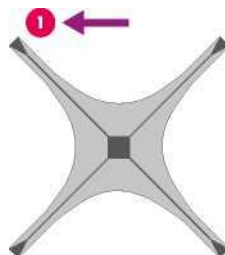

Start pumping one of the tent legs.

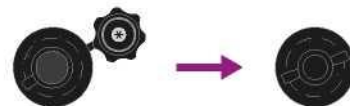


After inflating each leg, be sure to close the inlet valve.

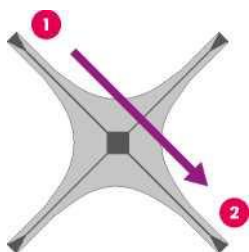

Inflate the opposite leg to the one already inflated. Start pumping the next leg.



Before pumping the last leg, erect the tent and continue pumping the fourth leg. Close the inlet valve.

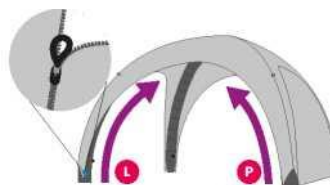

After filling with air all modules (legs), fasten the walls with zips on the right and left side of the wall.



Pinned walls should be fastened to the ground with straight pegs.



Finally, stabilise the tent. Fix the legs to the ground with straight pegs.



Roll the cables out to their full length and fix to the ground according to scheme shown in the picture above.

INSTRUCTIONS FOR ASSEMBLY AND DISASSEMBLY OF FIXED PRESSURE TENT

DISASSEMBLY



Detach the side walls.
Remove pegs and cables.
Open the inlet valves in
the legs.



After letting the air out of the
modules (legs), lay the tent
cover flat so that the tent legs
are aligned in one direction.



Let the air out by rolling up the
tent from its top in the
direction of the valves