

OPERATING INSTRUCTIONS FOR FIXED PRESSURE FIGURES AND FOR FILLING WITH AIR OR HELIUM

Operation

1. Check the structure for tightness by filling with air.
2. Erect and use the structure in winds not exceeding 15 km/h.
3. Do not dry-clean, clean only with mild detergents.
4. Use legally, in places where there is no risk of damaging the product or causing an accident.
5. If in doubt about the place of use, contact the Civil Aviation Authority and obtain the appropriate permits if necessary.
6. The statue requires refilling with helium at a rate of 1% to 10% of capacity per day.
7. Do not leave the figure unattended and control the level of filling with air/helium, bearing in mind that expansion may occur if the ambient temperature rises and contraction if it falls.
8. Carefully clean the area from sharp objects and stones before setting up the structure.
9. Unpack all elements and check that their condition is correct.
10. Unroll the figure cover.
11. Attach the support rope from the figure to the anchorage point.
12. Attach the hose to the helium cylinder.
13. Familiarise yourself with the operation of the cylinder valve (by unscrewing and turning the valve).
14. Insert the other end of the hose into the sleeve located in the figure.
15. Very slowly and carefully unscrew the valve.
16. Wait for the figure to fill. Hold by the braid of the support ropes and not by the inlet sleeve.
17. Close the filled figure tightly.
18. Fasten the filled closed figure to the ground using the support ropes.

Storage and dismantling

1. Pull the figure to the ground.
2. Open the sleeve/exit sleeve.
3. Hold the figure so that the outlet sleeve is above the axis of the figure.
4. Remove the figure's fixings.
5. Roll up the cover and place it in a place according to the storage conditions, i.e. store the figure with its accessories in a dry, sunless, ventilated place. It is permissible to store only dry and clean elements of the set

OPERATING INSTRUCTIONS FOR FIXED PRESSURE FIGURES AND FOR FILLING WITH AIR OR HELIUM

Guarantee terms and conditions

The manufacturer provides a guarantee for a period of **12 months** and is only liable for product defects caused by an unintentional fault of the manufacturer.

The manufacturer shall not be liable for:

- damage caused by the use of the statue,
- damage caused by mechanical damage,
- damage caused by inappropriate installation and use of the statue,
- damage caused by the failure of any of the ropes holding the statue,
- damage related to other costs of use including loss of helium during damage,
- damage caused by third parties/vandalism,
- damage caused by bad weather conditions.

All requests for warranty processing should be made immediately after the damage has occurred and should include the following information:

- the date and time of the damage,
- a description of the damage - what the damage concerns
- a description of the weather conditions prevailing at the time the damage occurred,
- signed this instruction manual.

Take care with the seals at the valve closures. The lack of seals results in a slow escape of air/helium.

Date and signature of the client